




(GARDEN WINDOW SCREEN)
INSTALLATION GUIDE

THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN

Wrap your hands around FlexScreen's longest sides, squeeze the sides together 2"-3".


STEP 1

While keeping sides compressed 2"-3", aim FlexScreen's bottom corners into the screen track

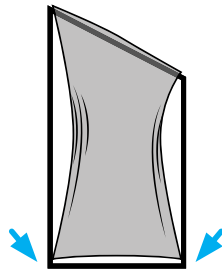


STEP 3

Aim short leg corner of the FlexScreen into the screen track.

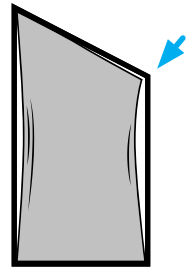

STEP 2


Aim top corner of the long leg of the FlexScreen into the screen track.

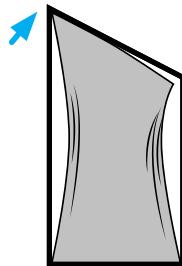

STEP 4

Once all corners are aligned release both sides to complete installation.

Close your window and enjoy your completely uninterrupted view!

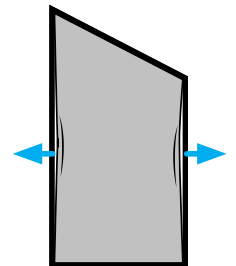




(GARDEN WINDOW SCREEN)
REMOVAL GUIDE

THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN


STEP 1

Pull tabs towards each other, squeezing inward 2"-3" inches.

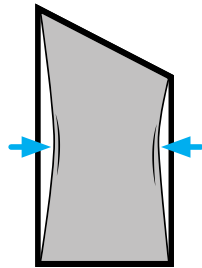


STEP 3

Still compressing both sides, gently remove long leg side from screen track.

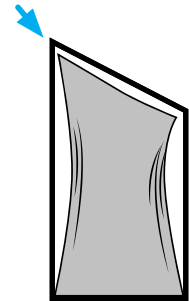

STEP 2

While keeping sides compressed, gently remove short leg side from screen track.

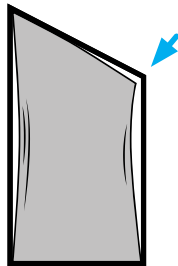

STEP 4

Once long leg and short legs are removed from screen track, release sides and remove from opening.

